



# Installation Instructions YFZ/YZ-450 and YZ-250 Exhaust Cam Sprocket

Step 1



Step 2




Step 3



Step 4



Step 5

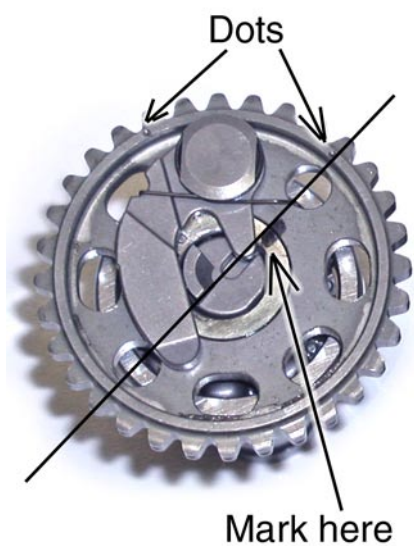

Step 1

Step 1 - Place a straight edge from the Sprocket Alignment Dot, across the sprocket to the opposite tooth. Mark the camshaft with an ink marker.

Step 2 - Press off the OEM sprocket. Be careful not to break the arm on the counterweight.

Step 3 - Place the Falcon Sprocket Adapter on the camshaft, aligning the dot to the mark on the camshaft. Press on the adapter.

Step 4 - Place the Falcon sprocket on the adapter, and bolt it in place.

Step 5 - Remove the parts from the OEM sprocket by pressing the Pivot Pin out. Install the Weight, Spring and Pivot on the Falcon Sprocket Adapter by pressing the Pivot Pin in place.

Align Dot to Mark



Step 3

Pivot Pin



OEM Sprocket



Final Assembly