




INSTALLATION INSTRUCTIONS  
RMZ- 450 EXHAUST SPROCKET

*Performance!*

AS EASY AS 1, 2, 3!!!

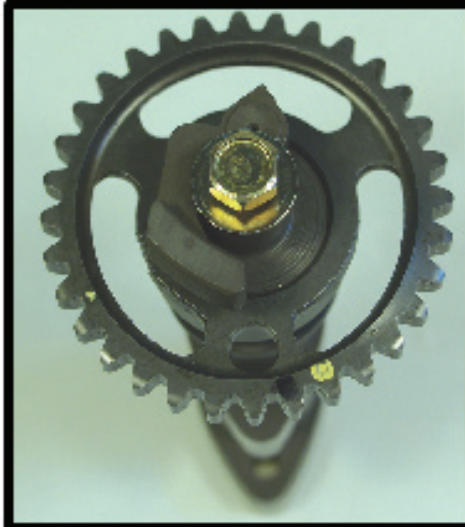

STEP 1

**OEM SPROCKET**

Before you dis- assemble the old sprocket note that the hole in the sprocket is in alignment with the cam lobe.

Remove the bolt and the decompression actuator and scribe a mark on the end of the cam in alignment with the hole. This mark will be used to assemble the adapter.

Remove the decompression mechanism and press off the OEM gear.




STEP 2

**ADAPTER INSTALLATION**

Install the bearing then orient the dot on the adapter with the mark made in Step 1. Press on the adapter until it is firm against the bearing. Install the spring arm and the decompression actuator.

Careful to hook the spring on the arm and the other end in the adapter recess.

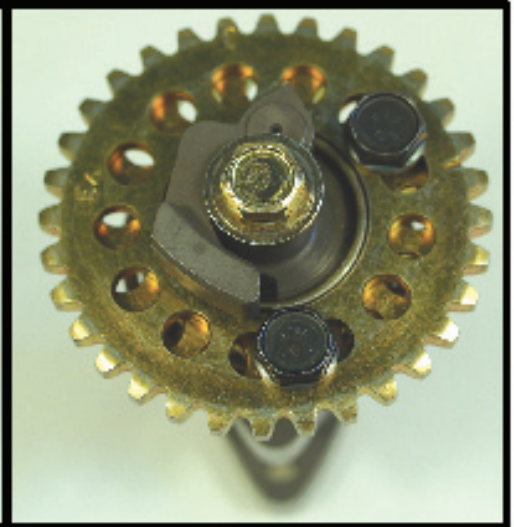

STEP 3

**FINAL ASSEMBLY**

The final assembly should look like the photo. Make certain that the spring arm has clearance from the bolt head and the mechanism moves freely.

Degree in your cams to the cam manufacturer's specification or your own preference.